stryker®

TPS™

Universal Handswitch

REF 5100-9

ENGLISH
日本語
ESPAÑOL
DEUTSCH
FRANÇAIS
ITALIANO
NEDERLANDS
SVENSKA
DANSK
SUOMI
PORTUGUÊS
NORSK

R_x ONLY

CE 0197

Stryker Instruments
4100 E. Milham
Kalamazoo, Michigan
(USA) 49001
1-269-323-7700
1-800-253-3210
www.stryker.com

EC REP

Stryker France
ZAC Satolas Green Pusignan
Av. de Satolas Green
69881 MEYZIEU Cedex
France

11/07
5100-009-700 Rev-H

IMPORTANT INFORMATION: File in your maintenance records

ENGLISH

For use with Total Performance System handpieces.

WARNING: Before using any TPS component, read and understand its instructions and review the important User/Patient Safety information provided in the TPS Console instruction booklet. Familiarization with the Total Performance System prior to use is important. If you have any questions, contact your Stryker Instruments representative or Stryker Customer Service at 1-800-253-3210.

WARNING: Prior to use, inspect for damage. Do not use if damage is apparent.

WARNING: Place handswitch in SAFE position while changing cutting accessory.

Important Information

Refer to your *TPS Cleaning, Maintenance, and Sterilization Recommendations* for instrument care information.

Installation

***RUN* = run**
***LOAD* = load**

NOTE: Cord must be removed from handpiece to install handswitch.

1. Slide safety switch to SAFE position. Figure 1.
2. Align white dots and press handswitch band over end of handpiece. Figure 1.
   NOTE: Handswitch band must be flush with handpiece so cord can seat properly. Figure 2.
3. Plug cord into handpiece. Figure 3.
4. Adjust finger rest as needed. Figure 3. The handpiece can be held like a pencil. Figure 4.
   NOTE: When using the handswitch with the TPS Oscillating saw, the finger rest must be either fully extended or retracted.

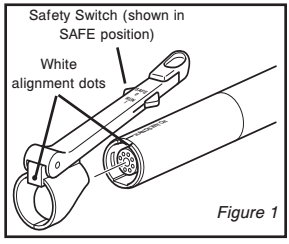

Figure 1

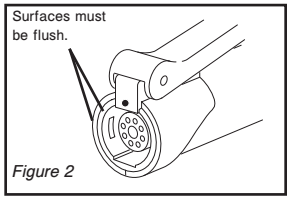

Figure 2

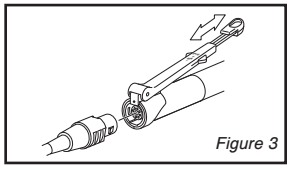
Figure 3

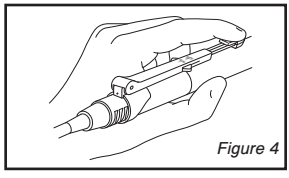
Figure 4

Instructions

1. Slide safety switch to RUN position.
2. Depress lever to regulate variable handpiece speed.
   NOTE: Maximum speed setting is selected on console.

WARNING: Always put the safety switch into the safety position to prevent inadvertent running of the handpiece.

To remove:

1. Place safety switch in SAFE position.
2. Remove cord.
3. Grasp band portion of handswitch and slide off back of handpiece taking care not to pull back on lever.

Troubleshooting

Problem	*Cause*	*Solution*
Handswitch does not work.	Not properly seated on handpiece.	Reseat.
	Safety switch in SAFE position.	Place safety switch in RUN position.
Motor does not reach full speed.	User may be sideloading switch.	Depress lever centered against handpiece.

Stryker Instruments
4100 E. Milham
Kalamazoo, Michigan
(USA) 49001
1-269-323-7700
1-800-253-3210
www.stryker.com

EC REP

Stryker France
ZAC Satolas Green Pusignan
Av. de Satolas Green
69881 MEYZIEU Cedex
France

stryker®